



USER MANUAL

IMPORTANT: REMOVE THE USB-C CHARGING CABLE FROM PACKAGING.

>> FULLY CHARGE BATTERY PRIOR TO FIRST USE <<

Thank you for purchasing DEX FINGERLIGHT! You can contact us directly via email at support@fingerlight.com with any questions, comments, or concerns.

Please review this **USER MANUAL** for precautions and instructions to optimize your DEX FINGERLIGHT for everyday use. You can also visit our website at www.fingerlight.com.

DEX FINGERLIGHT's durable, flexible ring is engineered as a 1-size fits most feature. It will firmly attach to any finger or thumb, in any position, and over gloves. We encourage you to experiment by wearing DEX FINGERLIGHT in multiple positions and on different fingers. Make sure to review the **QUICK START GUIDE** included in your package and on our website.

SAVE THESE INSTRUCTIONS



BATTERY SAFETY—3.7V 120mAh Lithium-ion Rechargeable Battery

WARNING: This product is small and can pose a choking hazard. Keep out of reach of children and pets. Use only under adult supervision.

EXPLOSION RISK, BURN, AND FIRE HAZARD. DO NOT DISASSEMBLE, CRUSH, SHORT CIRCUIT, HEAT ABOVE 130° F (54° C), OR DISCARD IN FIRE. USE BATTERY ONLY WITH DEX FINGERLIGHT. RECYCLE OR DISPOSE OF BATTERY ACCORDING TO FEDERAL, STATE, AND LOCAL LAWS.

LED SAFETY

CAUTION: POSSIBLY HAZARDOUS OPTICAL RADIATION EMITTED (RG-2) FROM THIS PRODUCT. DO NOT STARE AT OPERATION LAMP. IT MAY BE HARMFUL TO THE EYE. (PER IEC 62471 First Edition, 2006-07).

GETTING STARTED: CHARGING

Charge battery before first use. To access the USB-C charge port on the back of the DEX FINGERLIGHT, insert your fingernail under the recessed portion of the protective cover and gently flip it upward to visualize the charge port. Plug the provided charging cable into a power source, then plug the USB-C end of the charging cable into the DEX FINGERLIGHT. The USB-C charging cable can be used with a charging brick, computer, or any other compatible power source. Charge times can vary. On average, a fully drained battery will take 90-120 minutes to fully charge.

Continuous Battery Runtime: Battery runtime will vary based upon the light modes. The approximate continuous runtimes of each mode on a fully charged battery are as follows:

- 80 lumens: 2 hours 30 minutes
- 300 lumens: 45 minutes
- Stealth Green: 2 hours 15 minutes



Once the battery is fully charged, the battery protection circuit will stop charging to prevent overcharging. However, after charging is stopped, the battery will naturally lose a small amount of charge over time due to self-discharge.

It is not recommended to leave DEX FINGERLIGHT plugged into the charger for long periods of time, as this will reduce the useful life of the battery. Removing DEX FINGERLIGHT from the charger as soon as charging is complete will extend the useful life of the battery.

BATTERY CHARGE INDICATORS

DEX FINGERLIGHT has battery indicators located on top and in front of the power button. When the battery is low, the indicator will illuminate **SOLID RED**, indicating 2-6 minutes of remaining battery runtime, depending upon its current lighting mode. To extend battery runtime, switch to 80 lumens or **Stealth Green**.

PLUG IN IMMEDIATELY AFTER LOW BATTERY INDICATOR ILLUMINATES RED.

Once plugged in, the battery indicator light will switch to **BLINKING WHITE**. When DEX FINGERLIGHT is fully charged, the battery indicator light will illuminate to **SOLID GREEN**.

NOTE: DEX FINGERLIGHT will not operate while charging.

USAGE INSTRUCTIONS: FLEXIBLE RING OPERATION

To adjust the flexible ring, manually expand the ring to fit over the desired finger or thumb, then squeeze the ring to fit the finger or thumb comfortably. Refer to the Quick Start Guide included in the packaging or visit our website.

USAGE INSTRUCTIONS: LIGHT OPERATION

The power button located on the top of the DEX FINGERLIGHT is indicated by the icon logo with a raised ring around the outside. There are three lighting modes that occur with each power button press.

Lighting Modes: LOW white (80 Lumens), HIGH white (300 Lumens), and **Stealth Green**.

After **Stealth Green**, the next button press will cycle to off.

Once the preferred lighting mode is selected, **Mode Memory** will automatically engage after three (3) seconds, at which point the light will turn off instead of cycling to the next setting. From "off," pressing the button will turn the light to the same setting. To go to a new setting, the button must be pressed within three (3) seconds of turning on the light. Mode Memory will reset when DEX FINGERLIGHT is plugged-in to charge.

USAGE INSTRUCTIONS: GENERAL USE

DEX FINGERLIGHT is indicated for use as a finger-mounted illumination device. Its intended use is for hands-free tasks and can be worn in any position. DEX FINGERLIGHT is resistant to most solids, dust, and splashes of water. **DO NOT SUBMERGE UNDERWATER.**

To clean the surface of the DEX FINGERLIGHT, use a damp cloth with water or isopropyl alcohol and apply light pressure.



DO NOT use DEX FINGERLIGHT in a combustible environment. Do not clean with acetone or other volatile solutions which may irritate skin or corrode.


DO NOT dismantle the device.

Use of DEX FINGERLIGHT for any purpose other than finger-mounted illumination is specifically discouraged. Wild M Brands, LLC disclaims liability for other than recommended use.

USAGE INSTRUCTIONS: STORAGE

DO NOT store where the temperature can exceed 130° F (54° C) or drop below 15° F (-9° C).

DEX FINGERLIGHT may need to be charged if stored for a prolonged amount of time or exposed to extreme temperatures.

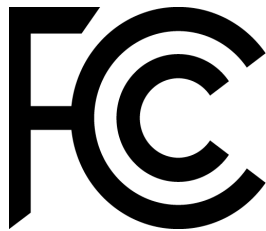

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DEX FINGERLIGHT is a trademark of Wild M Brands, LLC and covered by one or more U.S. patents 11,129,453; 11,927,314; and 11,971,145. International patent(s) pending.



Contact Us

Wild M Brands, LLC, d/b/a DEX FINGERLIGHT
17826 Edison Avenue
Chesterfield, MO 63005 USA
Phone: (636) 532-9300
Email: support@fingerlight.com